


1,5 m × 15 m

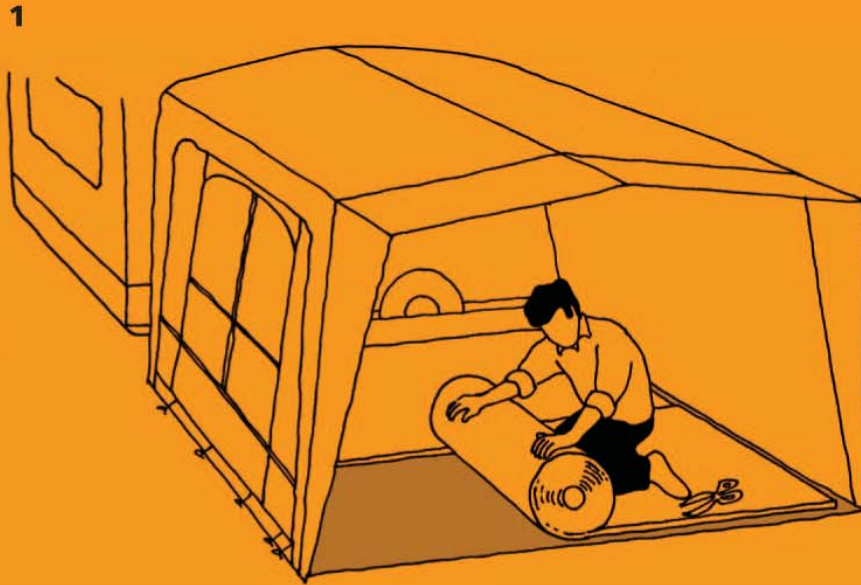

GB Insulating comfort underlay

1

- Erect the awning.
- Place a waterproof plastic underlay on the ground with a surplus of 10 cm at all sides. Lay the wooden floor underlay, if desired.
- Unroll the ComfortCarpet on the plastic underlay. Cut to size, flush with the edges of the awning.

2

- Unroll the awning carpet. Have a nice holiday!

Tip:

For even better comfort and protection of your awning use the ComfortCarpet with the water breathable GroundCover awning underlay.