


2 m × 18 m

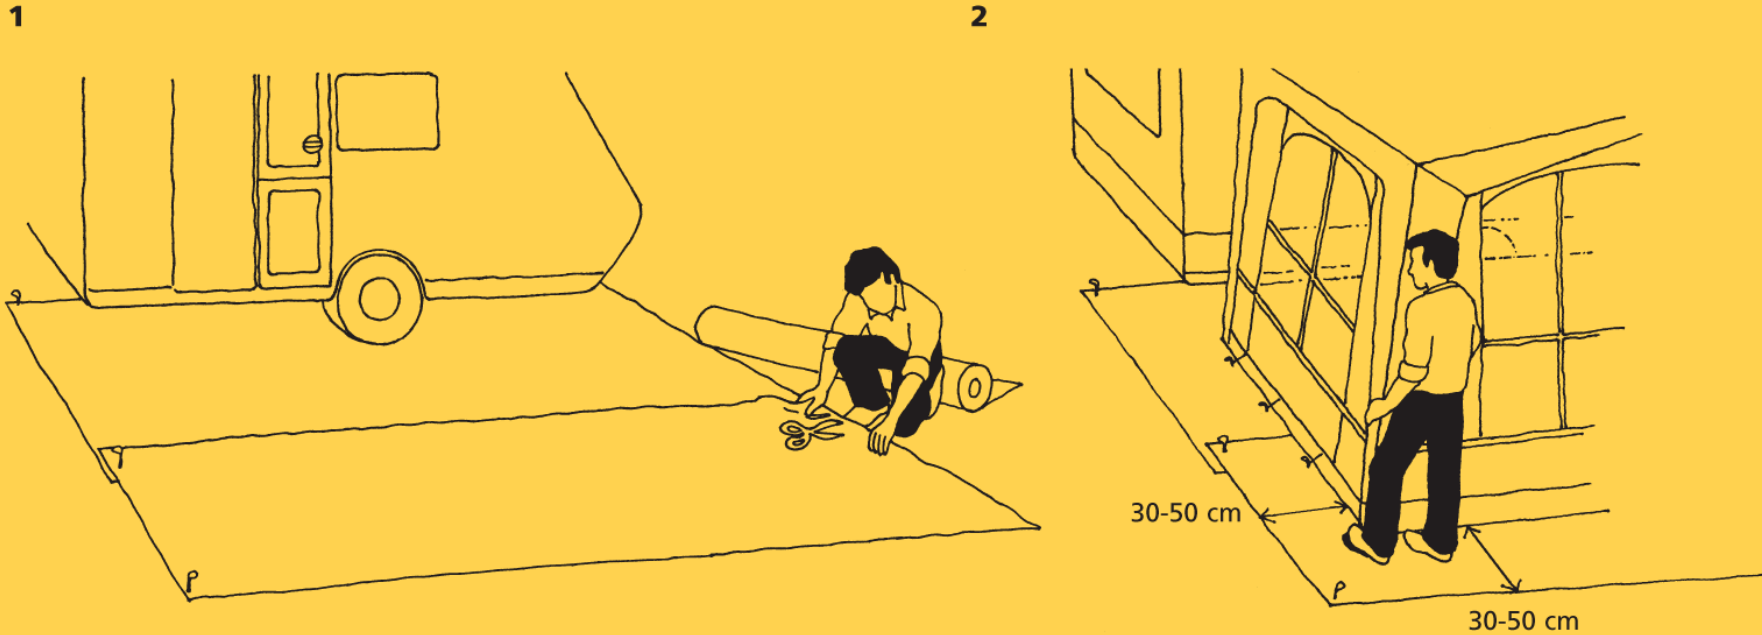

## GB Breathable awning underlay

1

- Unroll the GroundCover along the caravan where the awning is to be erected. The underlay must exceed the awning by 30-50 cm on all sides. Use a pair of scissors to cut the strip in the correct length.
- Unroll the second strip next to the first strip. Cut to the same length.
- Place and overlap the strips. About 30-50 cm underlay should be visible on all sides of the awning.
- Peg the corners of the underlay. The underlay is durable so it is possible to puncture the product with the peg. This will not impair the function of the underlay.

2

- Erect the tent. Have a nice holiday!

### Tip:

For the best comfort and a significant reduction of condensation place a waterproof groundsheet, ComfortCarpet and Bolon carpet on top of the GroundCover.