



Woodback® Pro



S O U N D - A B S O R B I N G
U N D E R L A Y F O R W O O D E N F L O O R I N G



Woodback® Pro – It is that easy

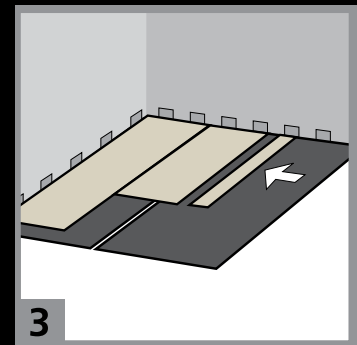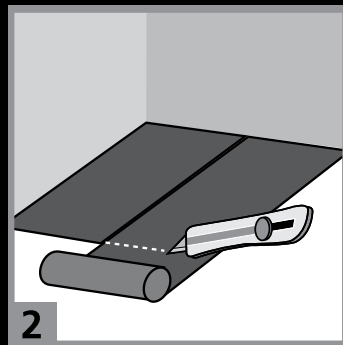

Woodback® Pro is easy to install. You can do it yourself without problems. When the vapour barrier has been laid out (on the concrete sub-floor), the Woodback® Pro is rolled out in lanes and cut to fit. Do not overlap lanes. Woodback® Pro is easy to adjust and does not bulge. The smooth surface ensures that the floorboards slide easily into place during installation.

Making the perfect match